

# WALLFACE CONCEALED PAN INSTALLATION INSTRUCTIONS

MODEL NO: STTS / STTP  
PRODUCT CODE: TP2002 OR TP2003

## S Trap Wallface pan :

Place unit in required position.  
Mark Position of the four holes on base of unit.  
Drill holes using a 12mm masonry drill bit.  
Place 12mm dynabolts in holes and lower unit into position and secure.

## Rear Bracket:

Insert 12mm threaded rod (supplied) into inside holes of restraining  
t/ bar and screw into the welded nuts on top half of unit.  
Repeat process for bottom restraining bar.  
Tighten the brackets to wall using washers and nuts (supplied).  
A bead of silicone is squeezed between unit and wall to eliminate gaps.

## P Trap Wallface Pan:


Toggle bracket (supplied) is placed on floor in a central position.  
Drill holes using a 9mm drill bit.  
Place 9mm dynabolts in holes and secure bracket.  
Slide unit into position so that toggle bracket enters locating bracket on  
base of unit.  
Follow S trap instructions for completion on fixing.



STANDARDS AUSTRALIA  
LIC. W585  
PAN CAP. 6L/3L  
MATCHING CISTERN  
WATER WAFER  
DUAL FLUSH

Note: These instructions are recommendations only, all care has been taken, but no responsibility will be accepted as S.C.S.S. are not licensed plumbers. Refer to the Plumbing Code AS/NZS3500.

**DRAWING NO: SC3A**  
05/05

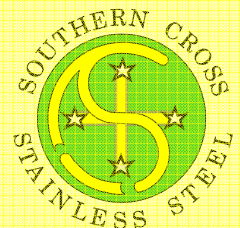

**23-27 Clapham Road**  
**Regents Park NSW 2143**

**Ph: 02 9644 2811**  
**Fx: 02 9645 1114**